
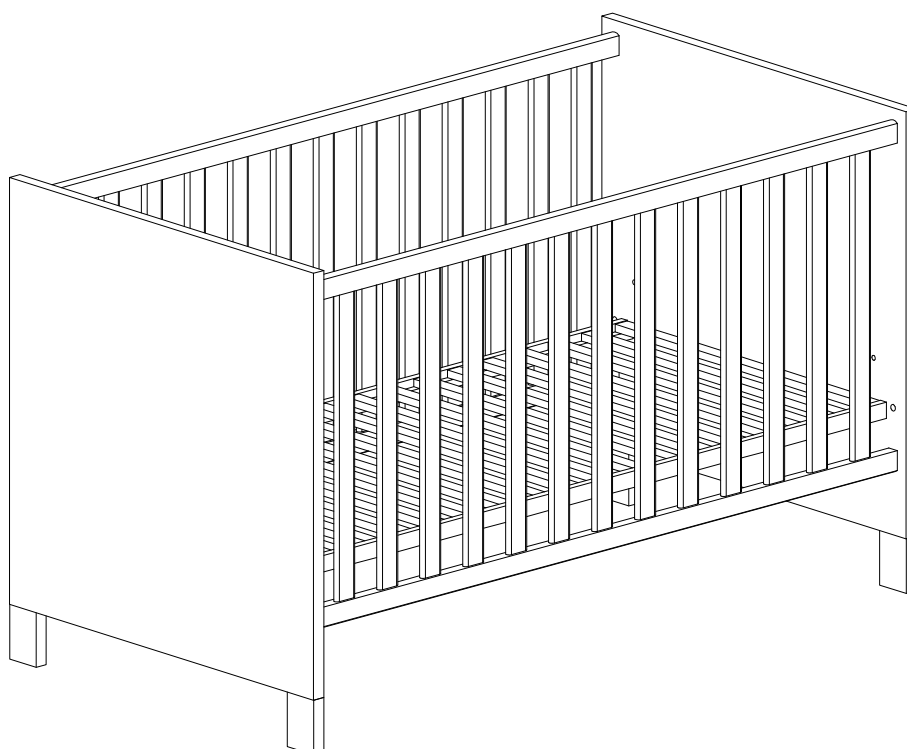


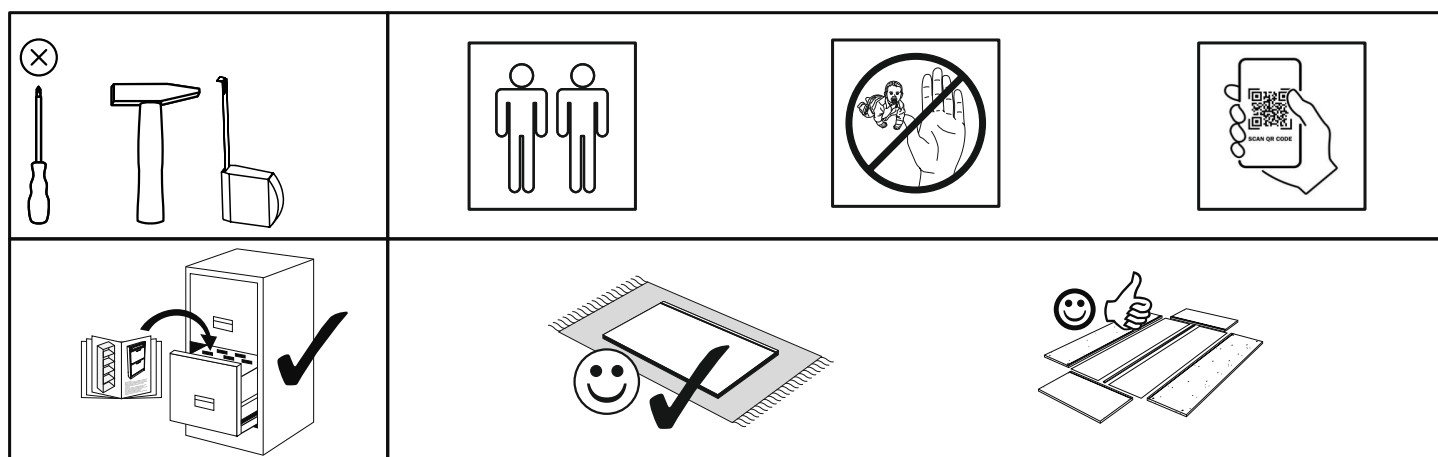








Artikel.-Nr:

0429-BH_Holz

Montageanleitung.-Nr:

MA1-00468

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>

BT1-00560 Colli 1/2									
B10-110		B10-105		B10-101		B01-239		B10-115	
8x		8x		8x	M6x6 SW3	1x	SW 3	12x	12x10 M6
B01-302		B01-240		B01-357		B01-242		B10-80	
4x	M6x80	1x	SW 4	4x	M6	1x	SW 6	2x	
B10-95		B10-85		B02-104		B05-130		B10-90	
4x	6,3x19	2x		4x	8x40	1x	Leim	12x	




Colli 1/2



Z27-93
4x

100 x 68 x 24

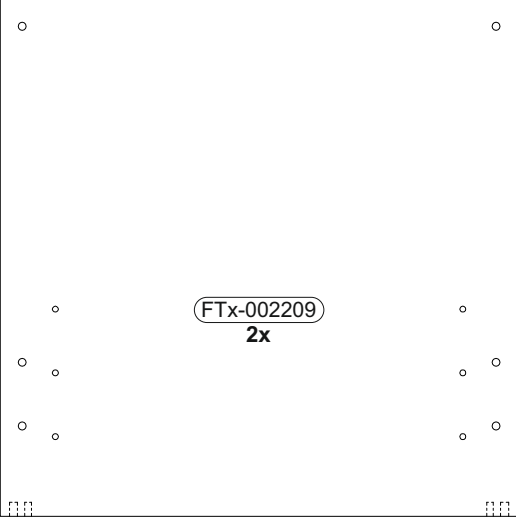

FTx-002209
2x


760 x 780



L = 20 mm




Colli 2/2

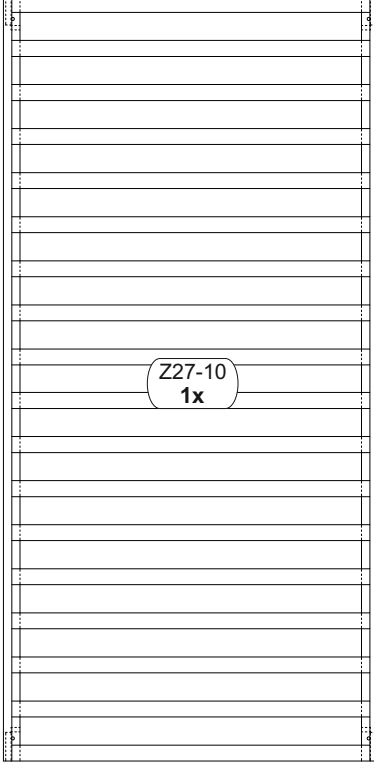


Z27-10
1x

1388 x 680

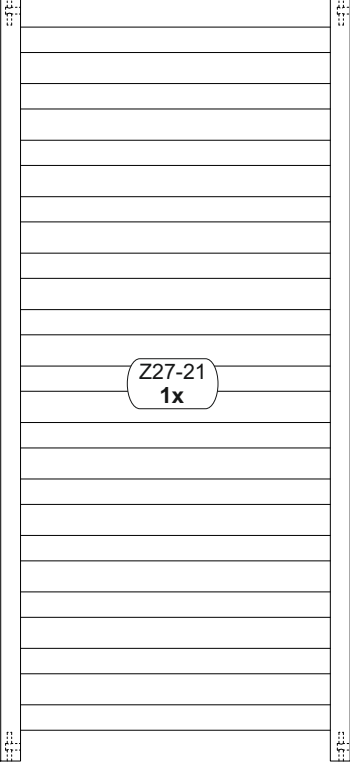

Z27-21
1x

1388 x 642



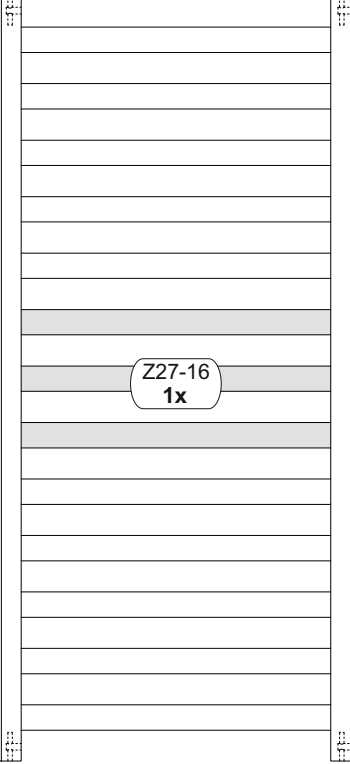


Z27-16
1x

1388 x 642






1

	B10-115		B10-90		B10-110		B01-302		B01-240
	12x	12x10 M6	12x		8x		4x	M6x80	1x
			B01-357		B01-242		B02-104		B05-130
			4x	M6	1x	SW 6	4x	8x40	1x

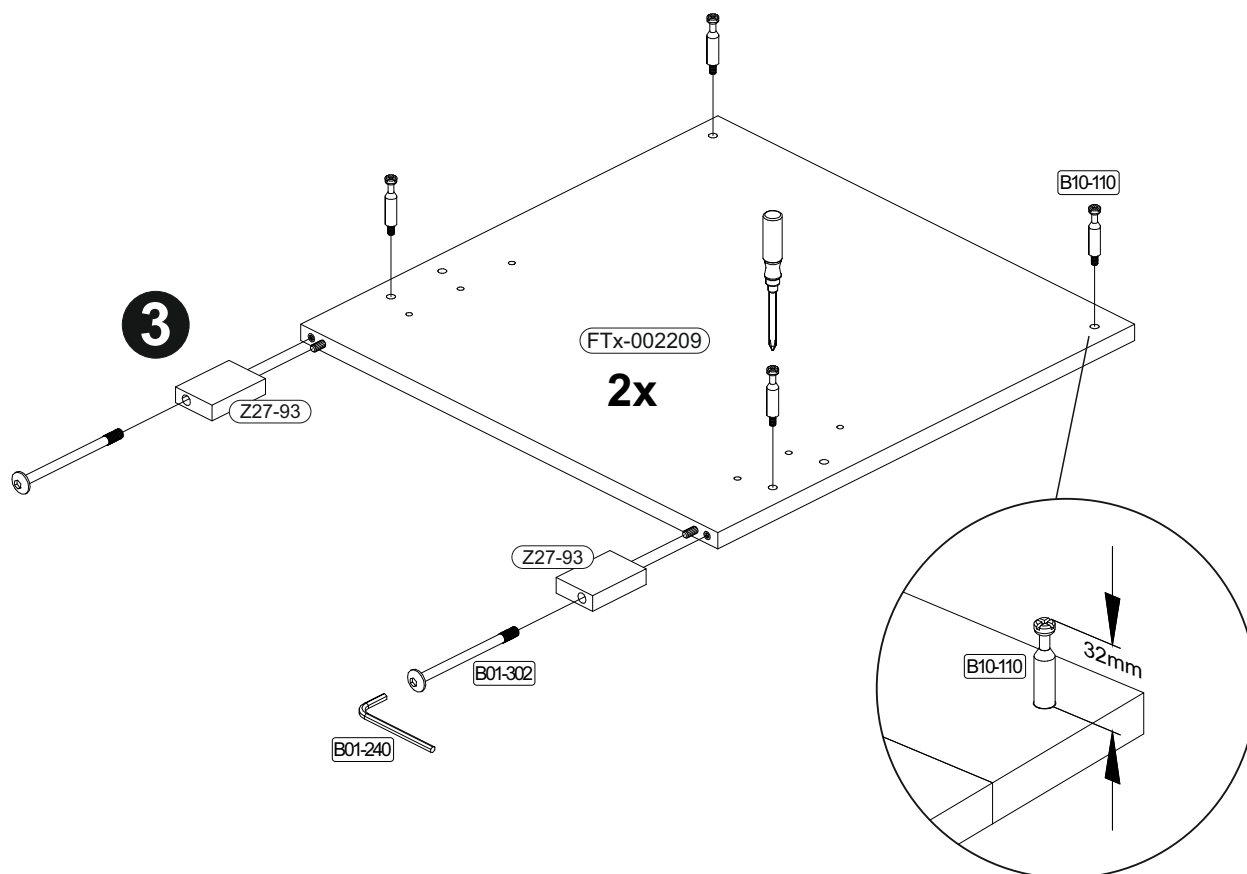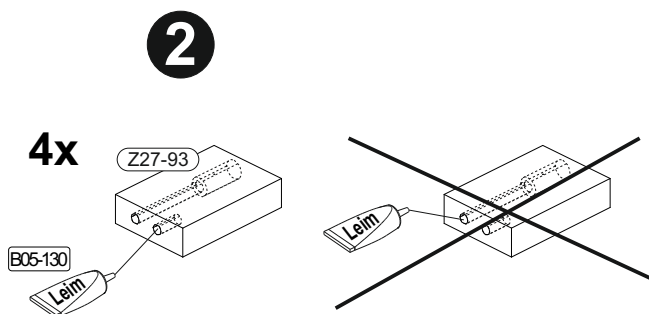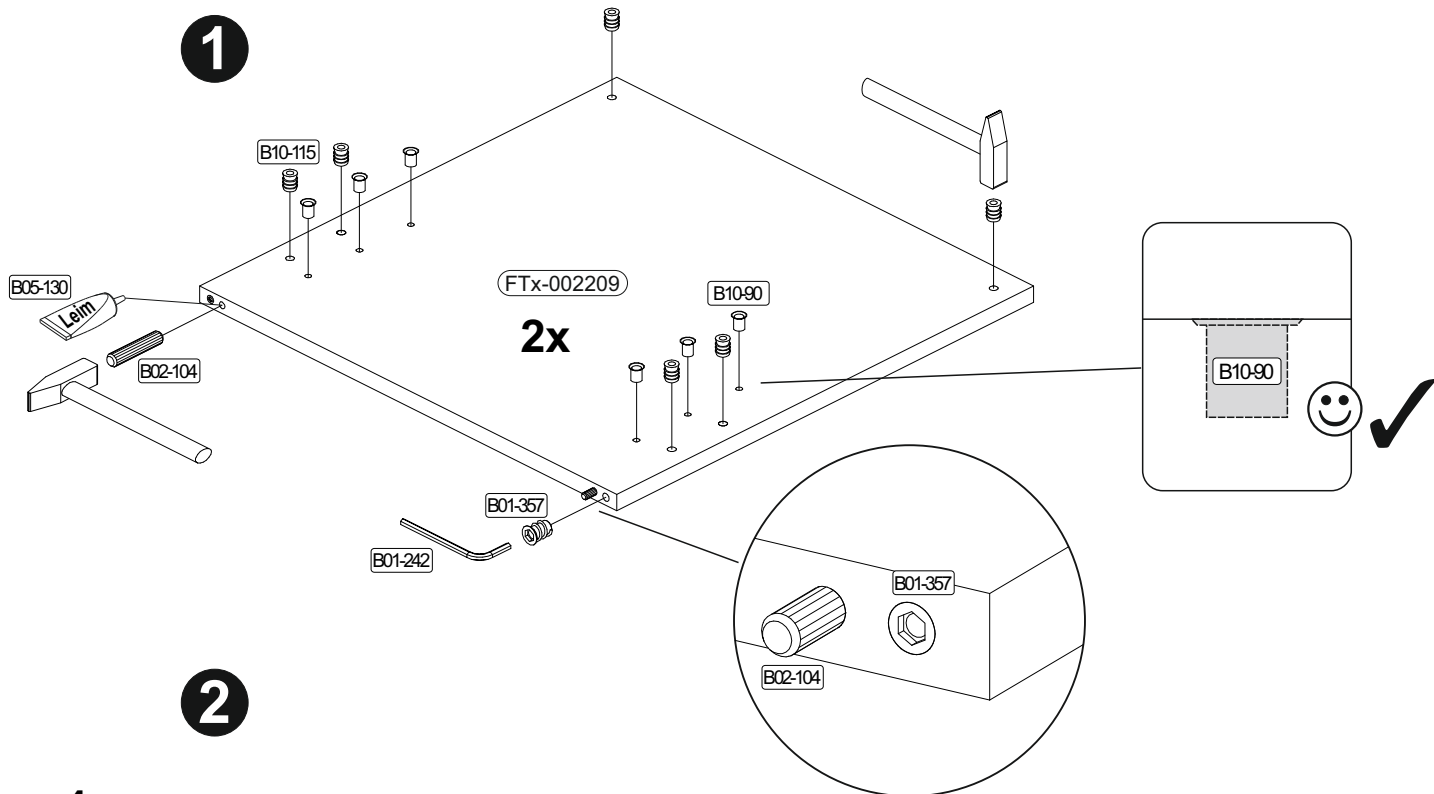


2

							
	B10-95	B10-105	B10-80	B10-85			
	4x	8x	2x	2x			
	6,3x19						

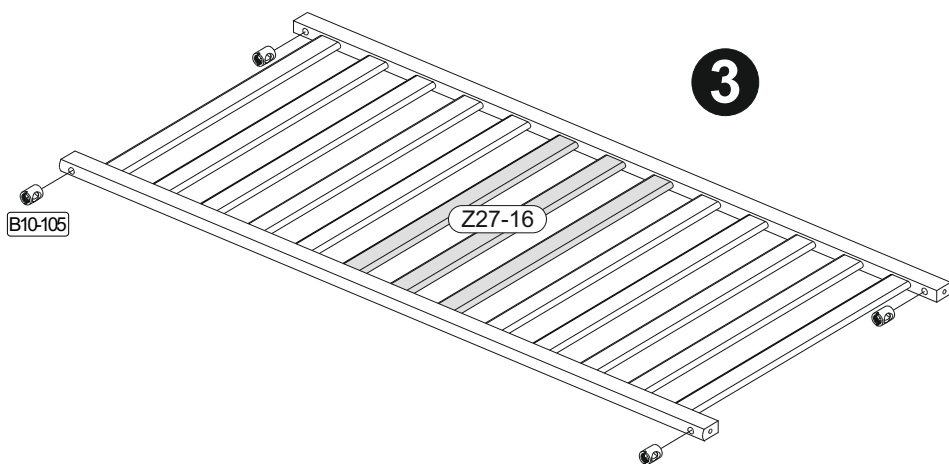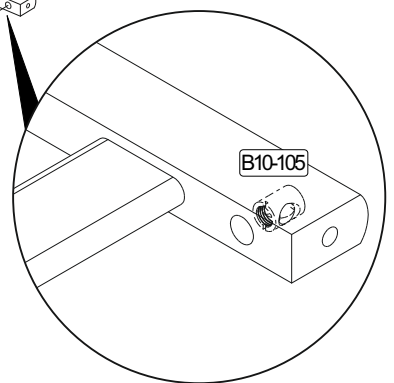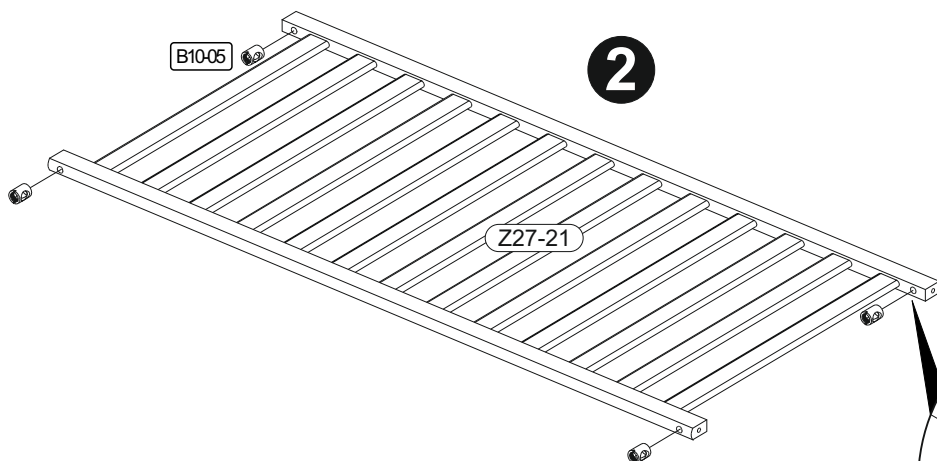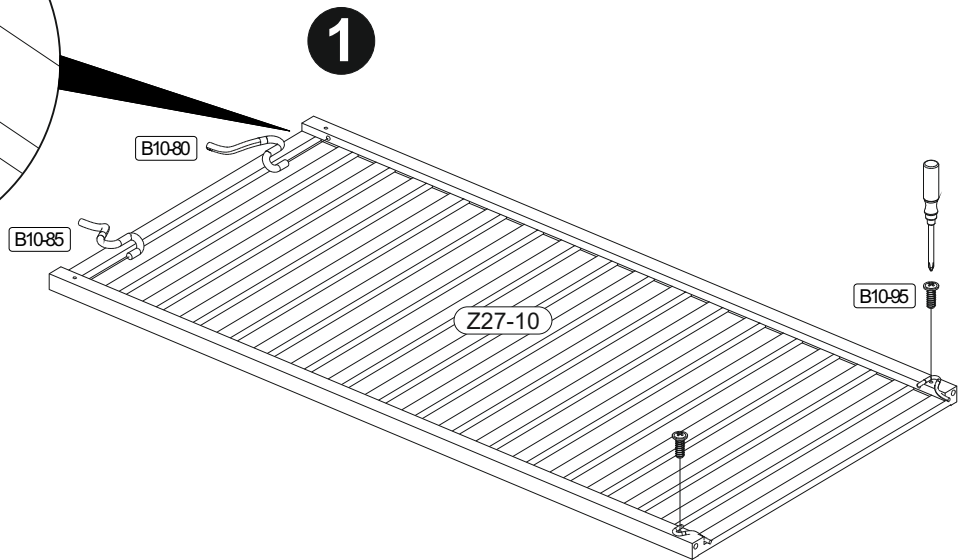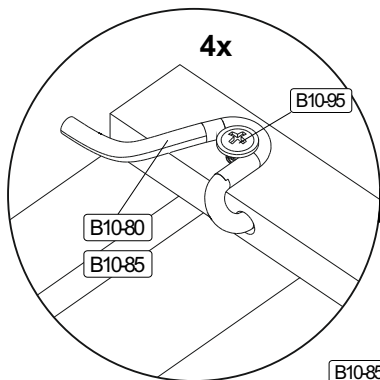

3

B10-101		B01-239	
8x	M6x6 SW3	1x	SW 3

